

### Installation Guide

Please read these instructions carefully before installing

This guide uses examples of a single & double garage floor, for the purpose of fitting.

The same following steps should be taken for any size area.

The Versoflor tiles are not to scale in this guide.

Use your provided floor design/layout pattern to determine which tiles go where

If you have a mosaic design or LED lighting in your floor then it is recommended to follow these steps first.


Any questions please contact the technical department on Tel: - 01164362461 to get additional help or advice.

### Preparing your floor


Versoflor garage flooring is designed to be installed on a mostly flat and even surface to ensure proper alignment, stability, and durability.

Surfaces with significant unevenness, holes, or damaged areas may compromise the stability and longevity of the flooring.

For best results, we recommend repairing cracks or holes using an appropriate filler and levelling uneven areas with a self-levelling compound or similar product before installation.

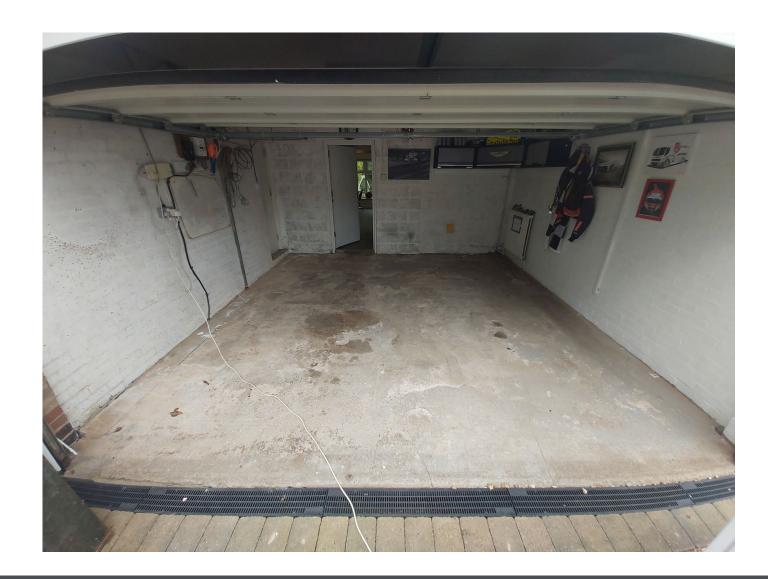

- Empty your spaceSweep all debris out so the floor is as clean as possible
- Remove any defects from edges e.g. lumps and bumpsMeasure width and find your centre line

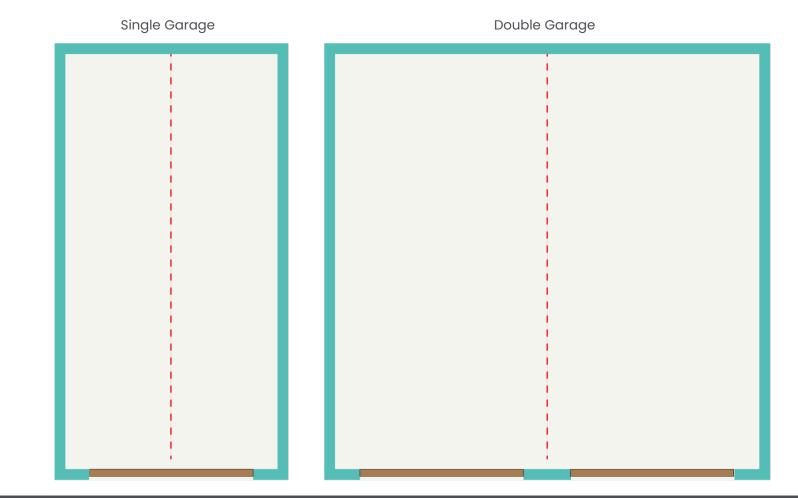






- Make sure your tiles are laid in the same orientation as image
- Connectors are on the right and bottom edge


Correct Orientation:
Connectors to the right
And bottom, facing your front entrance.


#### Single Garage

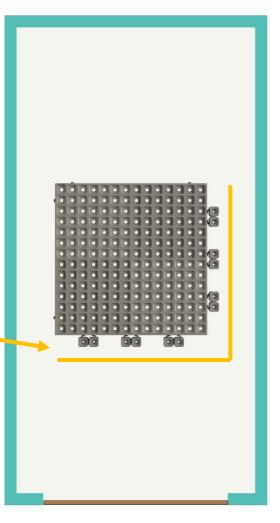

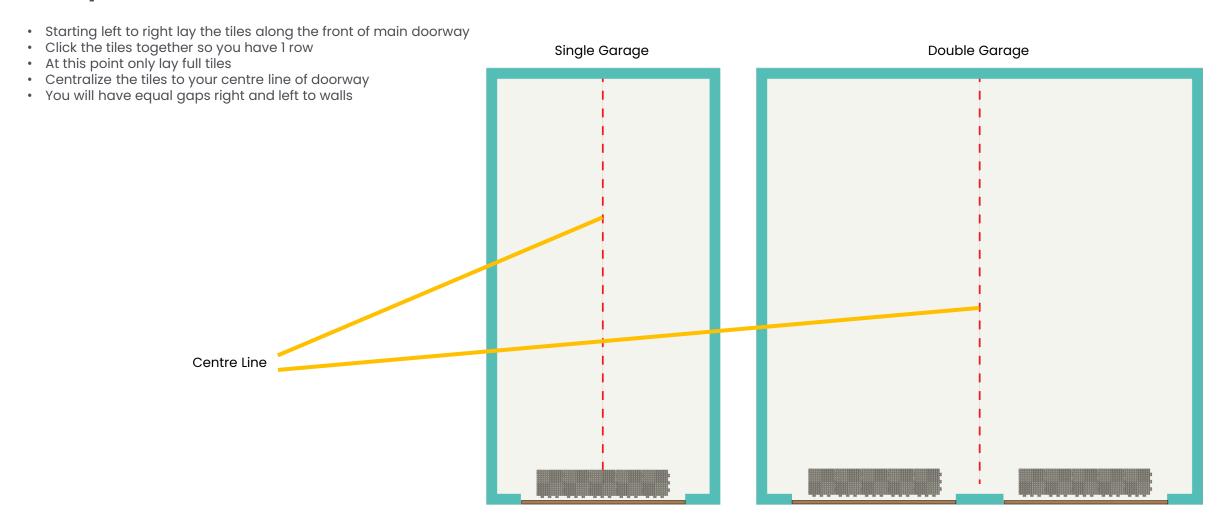

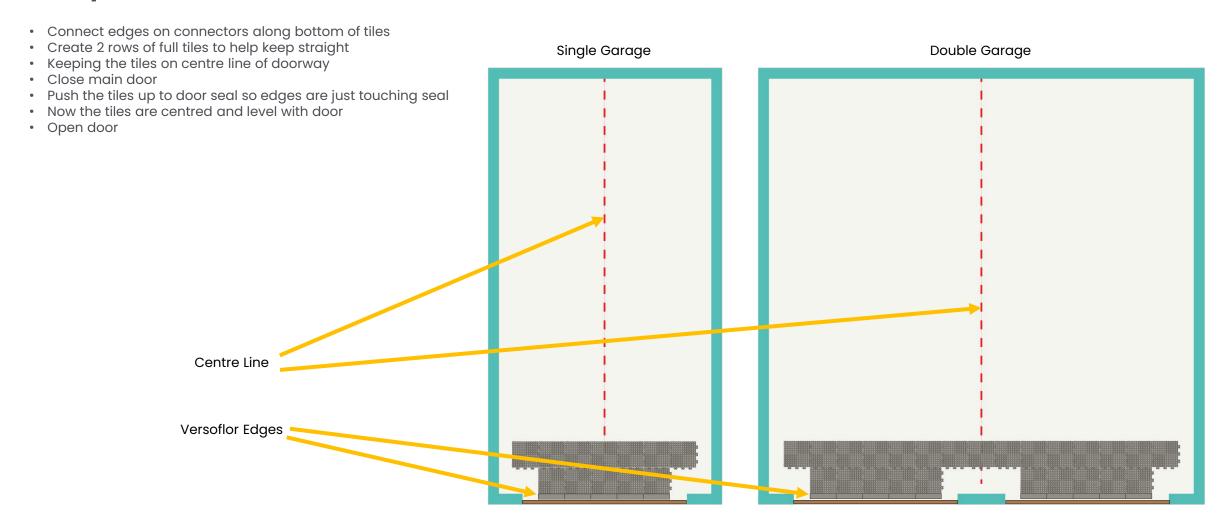

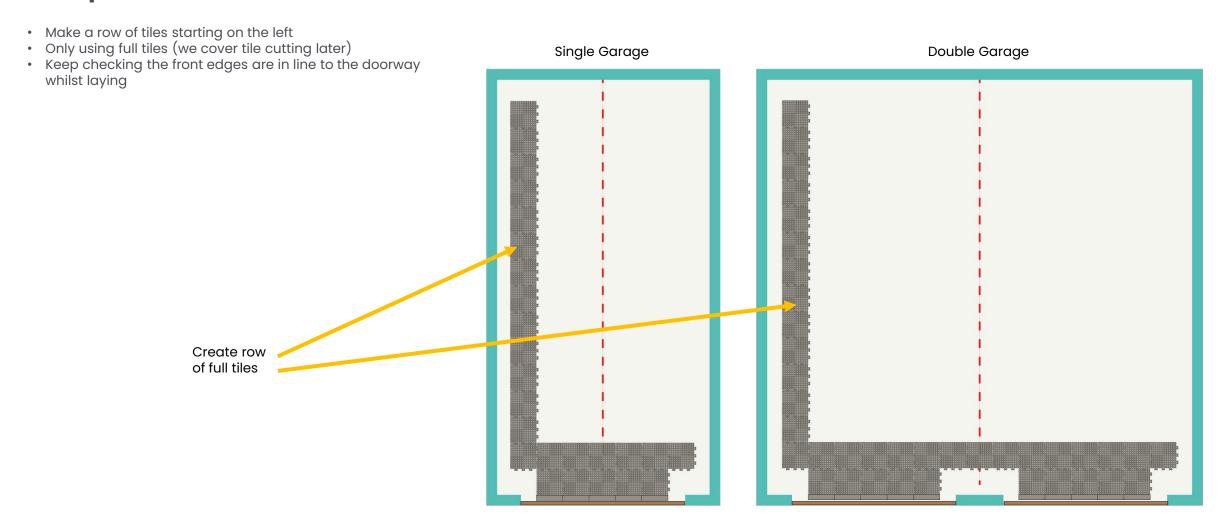

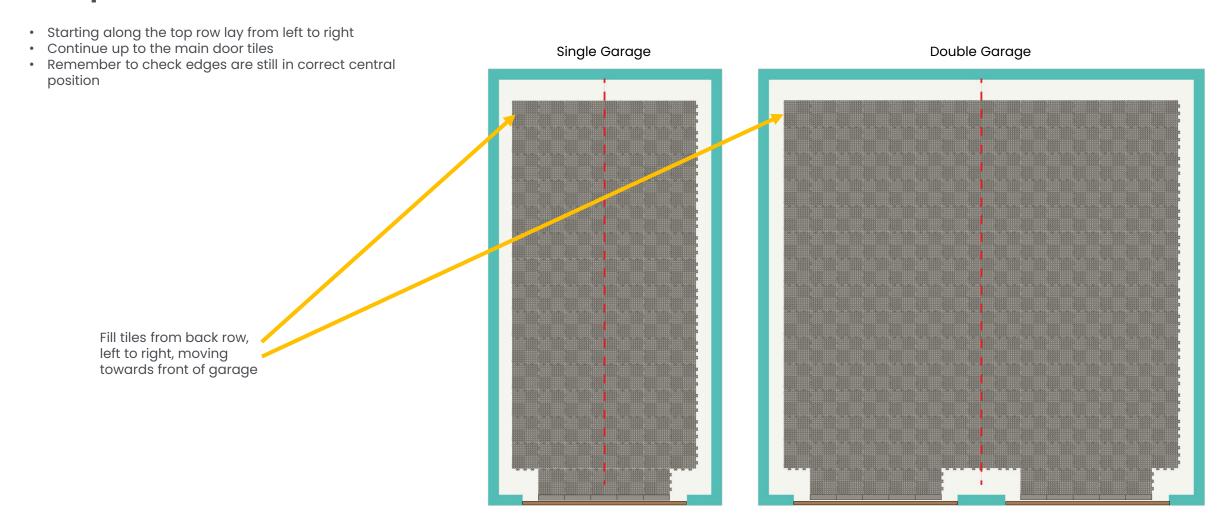

### **Cutting Guide**

- You can use multiple tools to cut Versoflor tiles
- Jigsaw with wood cutting blade, circular saw, panel saw, table saw (anything capable of cutting wood)
- Recommended use of a hack saw to cut edges as power saws can scratch the edge piece due to the profile of the edges
- When measuring the cut, measure from both ends of the tile to the wall and using a straight edge draw a line using a pencil
- When measuring up to the wall you will need to leave a 5mm (Upflor Tiles) or 10mm gap (Taskflor Tiles) to allow for expansion
- THIS GAP IS REQUIRED ON EVERY CUT


**TOP TIP** - if you have a small cut to make that is smaller than the tile connector, take the tile it's being connected too and click on the tile to be cut,

measure and draw your cutting line and cut with the tiles connected.




# **Edge Cutting**

 Recommended use of a hack saw to cut edges as power saws can scratch the edge piece due to the profile of the edges

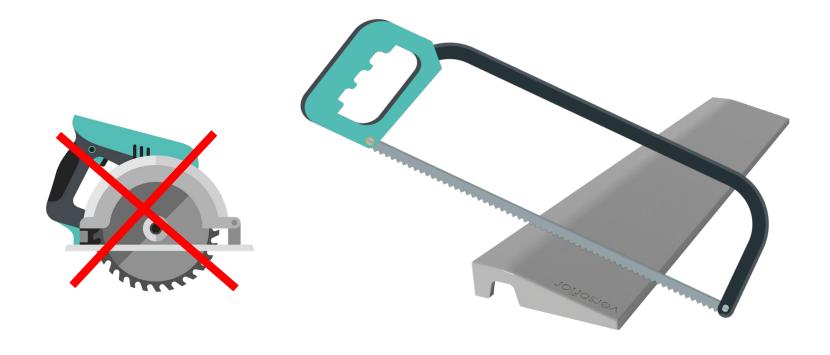





- This tile is going to be the first cut
- IMPORTANT measure the cut from edge of laid tile
- IMPORTANT leave a 5mm for Upflor, 10mm for Taskflor gap between wall and tile cut
- See fig 1

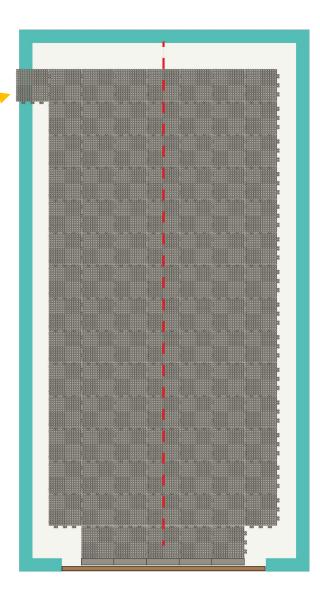


- the green area is the wall
- Deduct 5mm for Upflor, 10mm for Taskflor from measurement on all tiles cut
- This gap is to allow for expansion

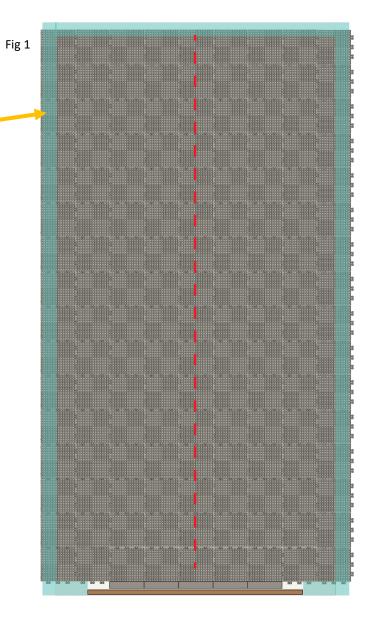

when all tiles are cut and laid with the correct expansion gap, left between the wall and edge of tiles, the only cuts left will be the edges

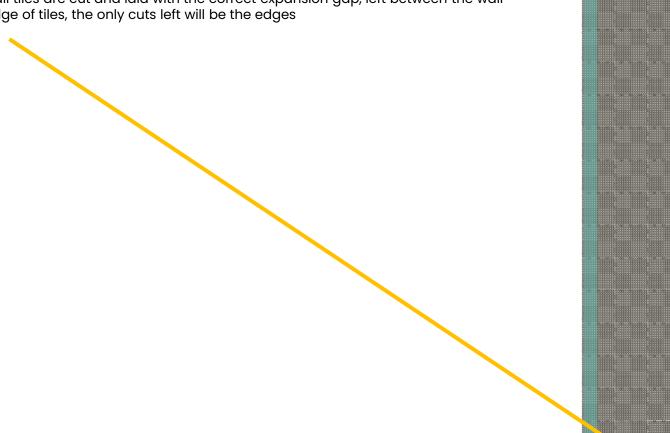


(Use a hand saw for these cuts, recommend a hack saw for best result).

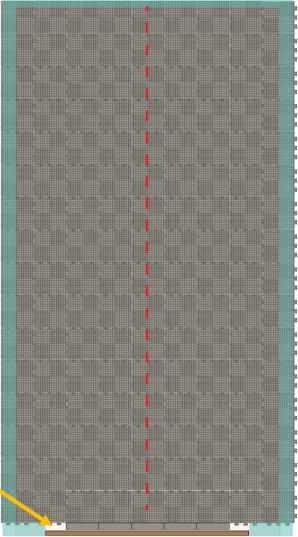

# Mosaic Designs


- You can now follow your plan provided to install the mosaic design if you have one
- Remember if you do make a mistake, you can remove tile and carefully using pliers remove the mosaic and replace

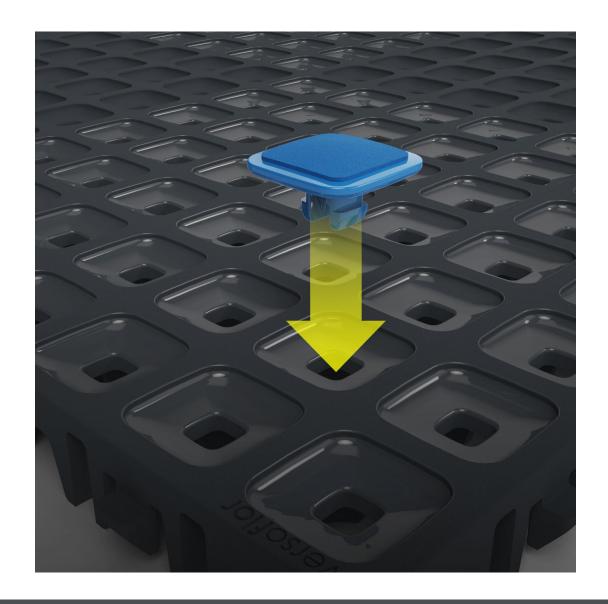


## Installing the LED lighting

- · Unroll the lights to the required length
- You can cut at places along the lights. Fig.1 & Fig.2
- · Remove the tile row required and turn over. Fig.4
- Choose a clear channel to lay the lights. Fig. 5
- Make sure the black line is between 2 tiles. Fig.3 & Fig.6
- Once in place start to clip in the lights. Fig.7
- Use 3 clips per tile. Fig.8

Carefully turn row over and clip back into the floor (would recommend 2 people to do this to help keep tiles from separating)

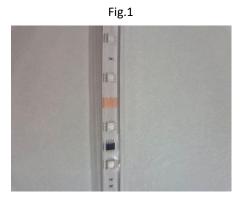

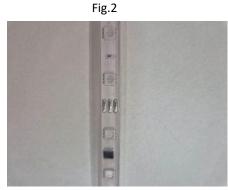

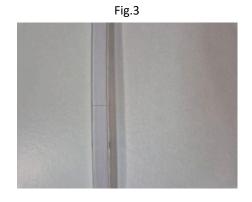


Fig.4




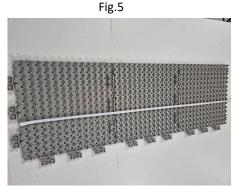








Fig.8

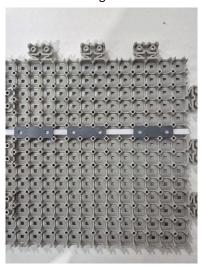

### Fixing and Securing

We recommend that the floor is fully fitted into place before fixing

- You can fix the Versoflor tiles to the ground if required (we recommend doing this if vehicles are continuously driving and turning on the floor to prevent the tiles lifting).
- remove the line of tiles that are on the row of required fixing points Fig 4b.
- If the base floor is slightly uneven or bumpy we recommend fixing the tiles at certain points. Fig 4a. & Fig 5.
- If the tiles slightly rock or have movement we recommend fixing the tiles at certain points.
- Use the tile connection holes to fix the tile to the ground see Fig.1
- You can use a 4mm wood screw and plug or as in Fig.2 a 6mm masonry screw (if using 6mm then pre-drill the hole to 6mm in tile connection as Fig 1.)
- Screw down so that the screw just pinches the tile, do not overtighten. Fig 3.
- We recommend fixing on one hole of every other tile along the front edge under the edge pieces, and in rows where the tyres will mainly run from the vehicle.







Fig 2.



Fig 3.



Fig 4a

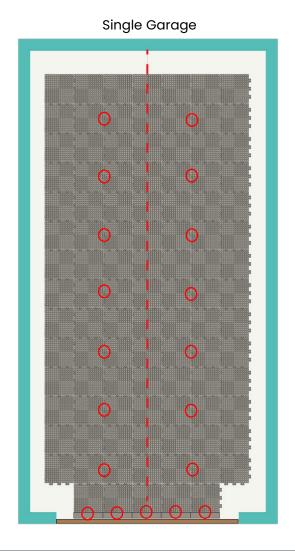



Fig 4b.

#### Recommended fix locations

Fig 5.

O = 1 x Masonry screw



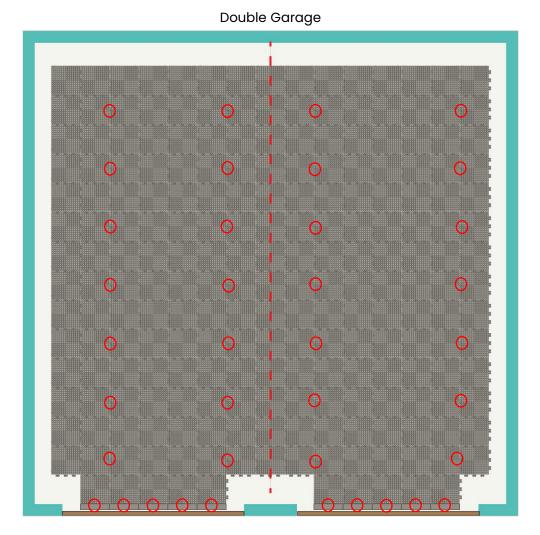


#### Cleaning Guide and Aftercare

Your new Versoflor product will require a regular clean to help keep it looking great. Here are some tips on how to maintain your floor:-



- A spray mop using any diluted floor cleaner will remove light dirt build up.
   We recommend doing this as often as possible to keep it clean and fresh.
- A vacuum is a great way to remove any build up of dust especially with a brush head.
  - (The vacuum will also pull up dust through the holes in the tiles as well)
- For Heavy dirt, scrub using damp sweeping brush using diluted degreaser (washing up liquid)
- Leave for 5 minutes to soak, with a clean damp mop clean the floor off.
- If you are in an area where possible, a jet wash will work great as the UPFLOR tiles
- Are draining tiles, water will drain away if there is a fall on the supporting floor, the water will also not puddle underneath.

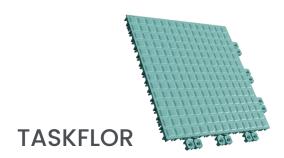

- A Spray mop using any diluted floor cleaner will remove light dirt build up. We recommend
  - doing this as often as possible to keep it looking clean and fresh.
- For heavy dirt, scrub using a damp sweeping brush using diluted degreaser (washing up liquid)
  - and leave for 5 mins to soak, with a clean damp mop clean the floor off.

#### Thank You

For more information or installation advice, please call +44 (0)1164 362 or email sales@versoflor.com

